

**CONNECTION  
FOR LIFE**



**User Manual**

# IMPORTANT SAFETY INSTRUCTION

Please read following information carefully before starting your operation!



- Please unplugged power adapter form outlet when the unit is not in use for a long time.
- When suddenly moving the unit form a hot environment ( $\cong 40^{\circ}\text{C}$ ) to a cold environment( $\cong 0^{\circ}\text{C}$ ) , or vice versa , turn off power and turn it on after 1 to 2 hours .
- Keep the unit away from rain or any other liquid . Object with liquid inside should not be placed on top of the unit . If there is liquid spilling into the unit , pull out power adapter immediately to avoid fire or electric shock .
- Do not cover ventilation holes with newspaper, cloth, curtain or other items in order to ensure good ventilation.
- Do not put any heavy object on the top of the unit .
- Please disconnect power adapter form power outlet before cleaning the unit . Gently wipe the outer surface with a dry cloth. Do not let liquids, aerosols, etc. spill into the unit and cause serious damage.

---

## Installation environment



- Good ventilation (keep more than 10cm spacing around the unit)
- No heat-producing object or device nearby (e.g. candle, radiator, heater, stove, amplifier)
- Moderate temperature ( $0^{\circ}\text{C} \sim 40^{\circ}\text{C}$ )
- No high humidity (e.g. bathroom, kitchen room)
- No direct sunlight
- No strong vibration



### Notes for power outlet and power adapter

- Make sure power outlet is near the unit and well-grounded.
  - Do not touch power adapter with wet hands.
  - Do not use a damaged power adapter as it may cause fire or electric shock due to short circuit ; It may endanger personal safety or property damage . Please contact AKASH call center for component replacement.
- 










### Instructions on remote control unit and battery

- Insert batteries into the battery compartment with correct polarity symbols marked inside the battery compartment.
- If the unit is not in use for a long time , please remove batteries to avoid battery leakage , which may corrode components inside remote control unit.
- Replace batteries if there is not enough power. Do not discard waste batteries carelessly and pollute environment.

# REMOTE CONTROL UNIT




<i>Name</i>	<i>Function</i>
	Switch between operation and standby modes (Red Button)
	Mute/restore sound
Info	Display channel information bar or detailed program information
Help	Display help Window
Search	Display channel search Window
	Display Bmail information window
	AKASH channel
	Display favorite channels window
Menu	Display/exit from main menu or back to previous menu
Exit	Exit from operation
	Switch channels or move cursor up/down
	Adjust volume or move cursor left/right
OK	Confirm selection
Back	Back to previously viewed channels/menu
Guide	Display program guide
VOL	Adjust volume
CH	Switch channels
0~9	Switch channels or input numbers
Audio	Select audio mode and audio language
Color keys	Functions depend on specific applications (Red, Green, yellow & Blue)

# INSTALLATION STEPS

①

## Connect signal


Connect LNB IN port on the receiver to satellite dish with an RF cable.

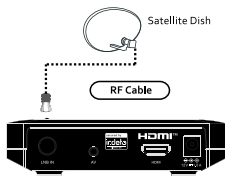

②

## Connect power

Plug the DC plug of power into power input port on the receiver; plug the other end into a power outlet.

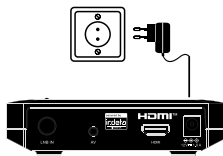


③

## Connect TV

Please choose either or following 2 ways to connect TV.

A. Connect HDMI port on the receiver to HDMI port on TV with an HDMI cable.

Note: Make sure your TV is set to HDMI input mode.

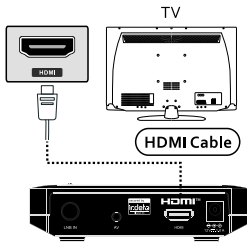


④

## Connect TV

B. Connect AV OUT port on the receiver to corresponding ports on TV with an AV cable.

Note: Make sure your TV is set to AV input mode.

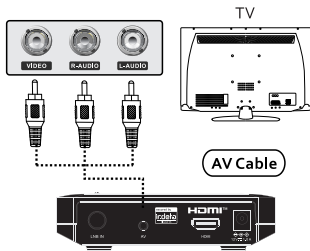

# HDMI™

HIGH-DEFINITION MULTIMEDIA INTERFACE

# HEVC Advance™


The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

**AKASH**  
Digital TV

**AKASH** GO


# MENU OPERATION GUIDE

## Notes:


- Please press menu key to display main menu Whenever you want to use menu system. In the main menu, press  keys to select a sub-menu and press OK key to enter.
- The default system lock password is “0000”, which you should remember after modification. If password is forgot please contact AKASH call center.
- There are some shortcut keys like Help, guide, media, info etc. Their meaning are mentioned in the Remote control unit of this manual.

## 1. Channel


**Reminder:** All the scheduled programs are displayed in this window. You can delete, add or modify schedule.

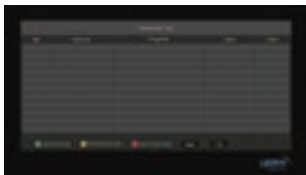


**Favorites:** You can set favorite channels, so that you can easily select them in favorite channel list.

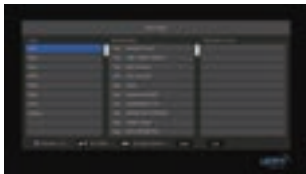

**Channel search:** You can search the channels you have subscribed for by typing.

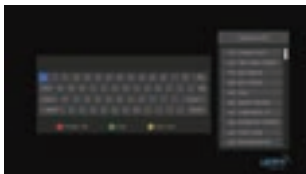


**Program Guide:** You can browse through program schedules up to one week & set program reminders

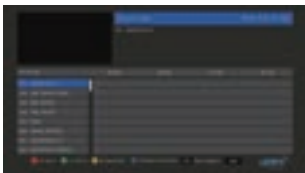

**Note:** System will remind you near the airtime of the scheduled programs.

## 2. My Settings

**AKASH Mail:** You can view all the mails received from AKASH. In addition, you can delete mails.

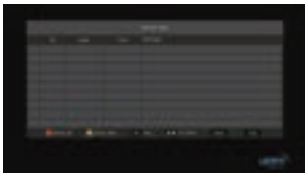

**Standby Settings:** You can view and modify auto standby status.

**Note:** The STB supports the active standby function without any operation within 3 hours. When prompted to standby, press any key other than the "OK" key to end the standby and restart the timing. This feature is immutable and unlike "Auto Standby".




**Audio Settings:** You can view and modify default volume, sound track selection and default sound track.



**Display Settings:** You can view and modify video mode, aspect ratio, display mode, etc.



**Parental Control:** You can modify channel lock settings. In addition, you can modify PIN. PIN is required to view locked channel programs.

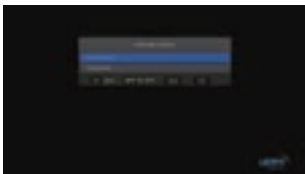

### 3. AKASH Settings

#### 3.1 Force Software Upgrade

Please follow instruction displayed on screen to perform upgrade when you need it.

**Notes:**


- Please search for channels based on AKASH default parameter values.
- Do not turn off the receiver during searching and upgrading.
- If you have any questions, please contact AKASH call center.

#### 3.2 Reset

This function will restore system settings to factory default and erase all channel . Please use this function carefully!

#### 3.3 STB Information

You can view information of the receiver, such as hardware version, software version, etc.

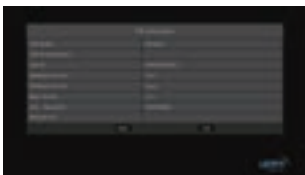

### 3.4 CAS Information

You can view information about service status, product status, mail information, etc. In addition, if a new version software is found, OTA Upgrade will be activated. Please follow instruction displayed on screen to perform upgrade when you need it.


**Note:** Do not turn off the receiver during upgrading.



### 3.5 Dish Settings


**Search:** You can get antenna parameters, and check the signal strength and quality of current selected TP .

**TP information:** You can view information of TPs.

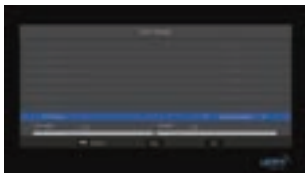

### 3.6 Installation

You can view the installation information.

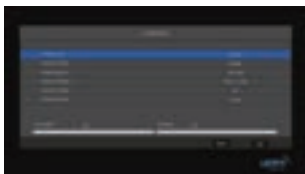

## 4. Help

You can see necessary help information including AKASH website address & AKASH Helpline Number.



# TROUBLE SHOOTING


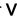 
## A. THE FRONT PANEL LIGHT IS OFF.

- Make sure power adapter is attached to the unit and plugged into a live power outlet securely.
- 


## B. NO PICTURE.

- Make sure video cable is connected correctly.
- 

## C. NO SOUND.

- Make sure audio cable is connected correctly.
  - Press  key to resume volume if the unit is in mute mode.
  - Press  or **VOL+** key to turn up volume if volume is set to minimum.
  - Press **audio** key to select proper audio mode and audio language.
- 

## D. NO SOUND AND NO PICTURE.

- Make sure AV cable or HDMI cable is connected correctly.
  - Make sure your TV is set to correct AV input mode.
  - Press  key to switch to operation mode if the unit is in standby mode.
- 

## E. PICTURE AND SOUND MISMATCHED.

- Press **audio** key to select proper audio mode and audio language.
- 

## F. NO SIGNAL.

- Make sure signal cable is connected correctly.
  - No signal from satellite dish. Try again when signal is available.
  - Satellite dish doesn't point at the satellite. Adjust the dish and check signal level.
- 

## G. PAUSE OR MOSAIC IMAGE.

- Satellite dish doesn't point at the satellite. Adjust the dish towards the satellite.
  - Signal is too weak. Please connect signal cable securely.
  - Inappropriate satellite dish size. Please replace the dish.
  - LNB does not work. Please replace the LNB.
- 

## H. PROGRAM CANNOT BE PLAYED.

- You have not subscribed to the selected channel. Please contact AKASH call center.
-

#### I. THE UNIT STOPS WORKING SUDDENLY.

- Poor ventilation, or heat-producing object or device is nearby. Put the unit in a cool and well-ventilated place.
- 

#### J. REMOTE CONTROL FAILURE.

- Make sure your remote control unit is aimed at the front panel.
  - No enough power in batteries of remote control unit. Please replace batteries.
- 

### **CAUTION!**

*You cannot solve the problem after referring to above trouble shooting, please contact AKASH Call center. To reduce the risk of electric shock, do not remove the cover. Equipment service and maintenance should be undertaken by trained personnel.*

## **Environmentally friendly disposal**



This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment. User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.

The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.; No naked flame sources, such as lighted candles, should be placed on the apparatus; Attention should be drawn to the environmental aspects of battery disposal; The use of apparatus in tropical climates.